

Lenco

DF-705

User's Manual



For information and support, www.lenco.eu

English V1.0

Cautions

Precautions and maintenance

- For indoor use only
- To avoid risk of fire or electric shock, do not expose the unit to moisture or condensation.
- To avoid overheating, do not block the ventilation holes on the back of the Digital Photo Frame.
- Keep the Digital Photo Frame out of direct sunlight.
- Always use the eject buttons on the memory storage card slots to remove the storage cards.
- Do not dismantle the Digital Photo Frame. There is a risk of electric shock and there are no user-serviceable parts inside. Dismantling the Digital Photo Frame will void your warranty.

Cleaning the LCD Screen

- Treat the screen carefully. Because the screen of the Digital Photo Frame is made of glass and it would easily be broken or scratched.
- If fingerprints or dust accumulate on the LCD screen, we recommend using a soft, non-abrasive cloth such as a camera lens cloth to clean the LCD screen.
- Moisten the cleaning cloth with the cleaning solution and apply the cloth to the screen.

WARNING:

Please power off the unit before inserting or removing a card or USB device.

Failure to do so may cause damage to the card/USB and the unit.

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

Introduction:

Thank you for your purchase of the Digital Photo Frame. It is designed to allow quick and easy view of photos taken from your digital camera, mobile phone, or from a memory storage card. Please read this User Manual carefully to learn the correct way to use the Digital Photo Frame.

Features:

1. Support Photo formats: JPEG
2. Support Memory card: SD/MMC/MS/SDHC
3. USB Connection: USB2.0 HOST
4. Built-in 8M Flash Memory with 1-3pcs photo storage
5. Adjustable brightness, contrast, saturation
6. Adjustable slideshow speed and above 10 kinds of transition slideshow
7. Unique design: various frame colors and frames
8. Rotatable stand (vertical and horizontal)
9. OSD Language: Chinese. English and other languages selectable

Packaging Check List:

 
- | | |
|-------------------------------|---------|
| 1. 7 inch digital photo frame | 1 piece |
| 2. User manual | 1 piece |
| 3. Remote Control | 1 piece |
| 4. AC/DC adapter | 1 piece |

CONTENTS

1. Product Diagram	4
1.1 Remote Control.....	5
1.2 Back Side of Frame	5
1.3 left Side of Frame.....	5
2. Installing & Replacing the Battery	5
3. Getting Started	6
4. Operating Instruction.....	6
4.1 Picture Mode.....	6
5. Setup	7
5.1 Picture Setup	7
5.2 Setup Menu-Auto-Playt.....	7
5.3 Setup Menu-Display setup.....	8
5.4 Setup Menu-custom setup.....	8
5.5 Setup Menu-Exit.....	8
6. Stand Instruction	8
7. Technical Specifications	9
8. Troubleshooting Guide	9


1 Product Diagram

1.1 Remote Control

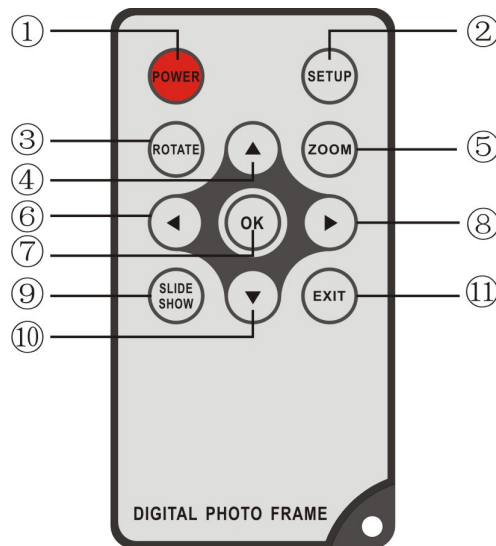


1. **POWER** — Power On/Off
2. **SETUP** —Go directly to Setup mode.
3. **ROTATE** —In the pause state of single picture, press ROTATE to revolve the picture 90° in counterclockwise every time.
4. **▲** —Functional selection button from the bottom to the top cursor.
5. **ZOOM**—In the pause state of single picture, press ZOOM to magnify picture display size.
6. **◀**—Functional selection button from right to left cursor. Revert to previous page when displaying folders.
7. **OK** — Press to confirm. Play/pause: In the playing mode, press this button, it will pause; repress this button, it will play again.
8. **▶** — Functional selection button from left to right cursor. Advance to next page when displaying folders.
9. **SLIDESHOW**— Press to start slideshow or pause when playing the picture.
10. **▼** —Functional selection button from the top to the bottom cursor.
11. **EXIT** — Press to return to upper page, or enter to the main menu.

 1.2 Back Side of Frame

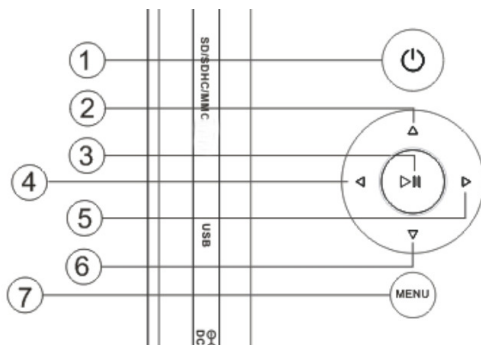

- 1.Power on/off
- 2.UP
- 3.Play/Pause/OK
- 4. Right
- 5. Left
- 6.Down
- 7.Menu/Exit

 1.3 left Side of Frame



- 1.SD/SDHC/MMC
- 2. USB
- 3. DC IN

2. Installing & Replacing the Battery

Place the upside of the remote control down, press down on the ridged area of the battery cover and pull towards you to remove the tray. Place one CR2025 lithium button-cell battery on the tray with the positive "+" side facing you. Reinsert the tray.



3. Getting Started

3.1 Extend the digital photo frame bracket on the back of the frame to the widest position for greatest stability, and then plug one end of the included AC adapter into a standard 110-240V AC electrical outlet and the other end into the right side the frame.

 
Note: There are different positions for the digital photo frame stand. Please refer to "Stand Instruction".

3.2. Remove the protective film covering the LCD.

3.3. Remove the plastic battery insulator from the battery compartment and make sure the remote control has a battery inside. Please refer to "Installing & Replacing Battery" if you need a new battery.

3.4. Power on the unit by pressing the Power button on the remote control.

4. Operating Instruction

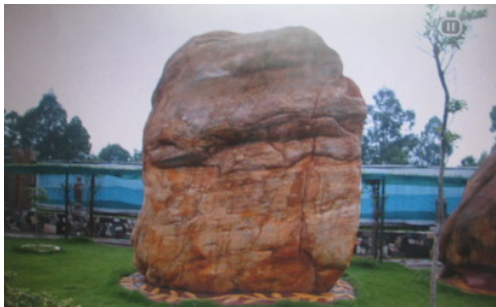


After turning on the unit, it will automatically slideshow pictures from the **CARD** or **USB**.


4.1 Picture Mode



 When it is automatic slideshow, press **EXIT** to the Thumbnail Mode. then Use **▲▼◀▶** to highlight the picture you want to display.

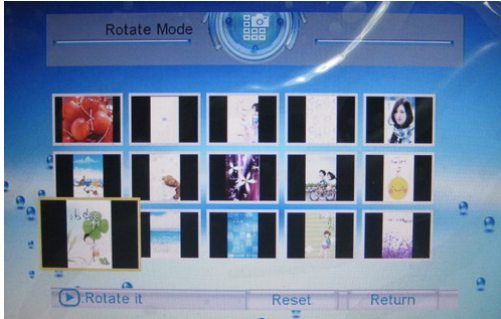

 In the thumbnail mode, press ▼ to select “Rotate”, press **OK** to access to rotate mode, use ▲▼/◀▶ to choose the picture you want to rotate, then press **OK** to operate. Press **Reset** to back to the default and press **Return** back to the first picture.

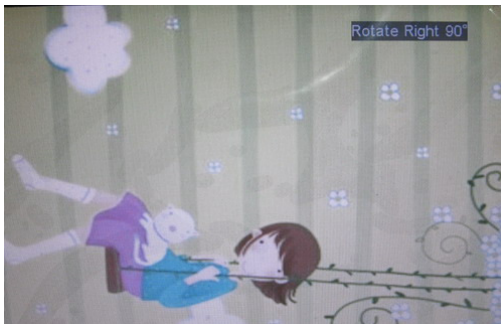

When the picture is playing, you can use ▲/▼ to flip the picture vertically/horizontally, press ◀▶ to revolve the picture 90° in counterclockwise/clockwise. Or press the **ROTATE** on the remote control directly.

5. Setup



Press **Setup** in the remote control; it will enter to the setup menu. Press ▲▼ to choose the item you want to set up. Use ▶ to show the submenu, select with ▲▼, press **OK** to confirm, press ◀ to return, and press **Setup** again to back to the slideshow mode.

5.1 Setup Menu-photo Setting

Interval time (5/10/15/30seconds/1min./3min./off)
Transition effect(no effect/Mode1 to Mode 14/Random)
Display Type(Full Screen/Fit Screen, Enlarge to Full)
Slide Mode(Normal/ Motion)
Browse(thumbnail/ file manager)

5.2 Setup Menu- Auto-play

Photo(on/off)

5.3 Setup Menu-Display setup

Brightness (Normal/Bright/Soft)

Contrast (-4/-3/-2/-1/0/+1/+2/+3/+4)

TFT Brightness (-7/-6/-5/-4/-3/-2/-1/0/+1/+2/+3/+4/+5/+6/+7)

TFT Contrast (-7/-6/-5/-4/-3/-2/-1/0/+1/+2/+3/+4/+5/+6/+7)

TFT Saturation (-7/-6/-5/-4/-3/-2/-1/0/+1/+2/+3/+4/+5/+6/+7)

5.4 Setup Menu-custom setup

OSD Language:

(English,French,German,Italian,Spanish Portuguese,Dutch,Polish,Chinese)

Repeat mode(off/one/folder/all)

USB Source(SD/MMC, MS, XD)

Default(read)

5.5 Setup Menu-Exit

6.Stand Instruction

Extend the bracket from the slot of the digital photo frame, rotate the bracket until it is locked in place ,and then revolve the bracket to choose standing horizontally or vertically. Please refer to the illustration shown below.



7. Technical Specifications

- **Adapter:** Input AC 100-240V 50/60HZ Output DC 12V/2A
- **Picture Format:** JPEG
- **Memory Cards:** SD/MMC/MS
- **USB:**USB Host
- **Screen Parameter:**
 - Screen Size: 7inch TFT
 - Resolution : 800*480 Pixel
 - Contrast: 300:1
 - Aspect Ratio: 16:10
 - Brightness: 300cd/m2
 - Response Time: 20ms
 - Working Temperature: 0℃~40℃, Humidity: 10-85%

8.Troubleshooting Guide

If you are having problems with your player, please consult both this guide and manual.

If you need further assistance, please contact Technical Support.

- **No power:**
 - Please check whether the plug is inserted correctly.
- **Remote control no function:**
 - Please check whether the battery has power (the battery can be used for half a year in normal conditions). Replace with new battery if necessary.
- **Can not read the CARD or USB:**
 - Please confirm whether there is storage in the card or USB device.
 - Empty devices cannot be read.
- **Can not play the file:**
 - Please confirm if the file format is compatible with the player.
- **Display too bright or too dark:**
 - Please adjust the brightness or contrast in the setup menu.
- **The color is light or no color:**
 - Please adjust the color and contrast setup.



If at any time in the future you should need to dispose of this product please note that: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)